

Compustar 1w900fmr-pro manual



File Name: Compustar 1w900fmr-pro manual.pdf

Size: 2025 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 29 May 2019, 15:32 PM

Rating: 4.6/5 from 662 votes.

Download Now!

Please check the box below to proceed.



I'm not a robot



reCAPTCHA
Privacy - Terms

Book Descriptions:

Compustar 1w900fmr-pro manual



Here is a list of options that you may want to review before installation. These are features that may not be normally set up at the time of installation. Therefore, there may be an extra charge for these features and installation. Please consult your installer if you would like any of these features. Some of these features require extra installation. You can match the function from the above menu with the option of the below menu by finding the corresponding starred numbers. All 1Way 4Button RemoteManual de Usuario. Aplicable al remoto siguiente. A todos los remotos de 1 Via con 4 BotonesRemoto. No. ID IC Internacional SolamenteEl funcionamiento esta sujeto a las siguientes condiciones;CUATELA Cambios o modificaciones no expresamente aprobadas por la parte responsable del cumplimiento de la norma, pueden anular la autorizacionIntroductionThank you for purchasing a Firstech system for your vehicle. In order to truly enjoy the benefits of this system, we recommend that youPlease note that this manual applies to the 1 Way4 Button Non Liquid Crystal Display Remotes. There are certain features listed in this manualThere may also be features listed in this manual that require additional installation or programmingIf you have any questions, please contact the original place of purchase. For further information you may also contact ourWarranty Coverage. Caution The Manufacture's warranty will be voided if this product is installed by anyone other than an authorized Firstech dealer. For completeFirstech remotes carry a 1 year warranty from original date of purchase. Warranty registration can be completed online by visiting www.compustar.com. Please complete the registration form within 10 days of purchase. We do not include a mail in warranty registration card with each unit. Registration must be done online. To verify that an authorized dealerBy Firstech, LLCWhen servicing or loaning your vehicle to others, the system should be in Valet mode.<http://shinhwacar.com/userData/board/f1-manual.xml>

- **compustar 1w900fmr-pro manual, compustar 1w900fmr-pro manual pdf, compustar 1w900fmr-pro manual download, compustar 1w900fmr-pro manual free, compustar 1w900fmr-pro manuals.**

AUTO SECURITY COMPUSTAR PRO

IW900FMR – PRO USER'S GUIDE



BUTTON FUNCTIONS

If you purchase a Starter or Alarm only system then you will not have all the functions listed below. An Alarm/Starter Combo system will have all of the functions listed below depending on vehicle.

Button	0.5 sec	2.5 sec	3.5 sec
	Locks and Arm		Lock then Panic (*8)
	Unlocks and Disarm		
	Aux 1	Trunk Release (*7)	
	Aux 2	Remote Start On/Off	
	Siren On/Off	Option Programming Menu #1 – Installer Only	
	Valet Mode On/Off (*2)	Shock Sensor On/Off	
	Drive Lock On/Off (*3)	Option Programming Menu #2 – Installer Only	
	Passive Arming On/Off		
	Timer Start On/Off (*4)		
	Turbo Mode On/Off (*5)	Query to activate Secure Aux (*1)	

Some of the button functions above require additional programming by the installer. Here is a list of options that you may want to review before installation. These are features that may not be normally set up at the time of installation. Therefore, there may be an extra charge for these features and installation. Please consult your installer if you would like any of these features. Some of these features require extra installation. You can match the function from the above menu with the option of the below menu by finding the corresponding starred numbers. Example: Valet Mode Function (*2) matches Option 3-10 (*2).

Option Number	Feature	Setting				Applicable To		
		Default(*)	Optional(*)	Optional(*)	Optional(*)	Alarm / Starter	Starter	Alarm
1-3	Driver's priority switch	Off	On			V	V	V
1-6	Reactivation Lock (Manual transmission)	Locks When Reactivation Mode is Set	Does Not Lock When Reactivation is Set	Reactivation Sens ID Seconds After the Last Door is Closed		V	V	

1

Valet mode prevents the system from remote starting and IMPORTANT While in Valet mode the remote will still control power lock and unlock systems. The parking lights will not flash. The system can be put into valet one of three ways Repeat this process to take the system out of valet mode. The only regular maintenance this system requires is remote control battery replacement. No programming is required when replacing First, remove the small Phillips screw located on the back of the remote. Once the screw has been removed, gently pull the remote apart taking care Your battery size should be listed on the battery. Replacements Duration. Additional. Programming Required Shortly after the first flash, the parking lights will flash twice. IMPORTANT If your system is set up for a secure valet option, you will not be able The secure valet switch is the small button with bright blue LED on the front and if installed is the only way to. The default code is 3, 3. Aux 1. Triggers the auxiliary 1 output Trunk pop. Triggers the trunk release output and opens the vehicle's trunk. By Firstech, LLC. Button. By Firstech, LLC Button. Duration. The remote transmitter functions have been predetermined and programmed from the factory. The four button configuration allows for many. Although Firstech remotes have numerous There are advanced Please go to www.compustar.com for more details. Aux 2. Triggers the auxiliary 2 output most commonly used for rear defrost or window roll down Activates the remote start. Repeat and remote start will shut off. Valet mode see Valet Mode section for details Drive lock. Activates ignition controlled door locks. Activates timer start mode. Timer start mode has multiple programmable settings Press the If you are in range and if the vehicle is ready to remote Activates the built in Turbo timer function. Additional installation is required when using Refer to the "remote start error Tap button. The LED will flash on your remote. <http://www.gamainvest.sk/images/data/f100-instruction-manual.xml>

AUTO SECURITY COMPUSTAR PRO

1W900FMR – PRO USER'S GUIDE



BUTTON FUNCTIONS

If you purchase a Starter or Alarm only system then you will not have all the functions listed below. An Alarm/Starter Combo system will have all of the functions listed below depending on vehicle.

Button	0.5 sec	2.5 sec	3.5 sec
	Locks and Arm		Lock then Panic (*8)
	Unlocks and Disarm		
	Aux 1	Trunk Release (*7)	
	Aux 2	Remote Start On/Off	
	Siren On/Off	Option Programming Menu #1 – Installer Only	
	Valet Mode On/Off (*2)	Shock Sensor On/Off	
	Drive Lock On/Off (*3)	Option Programming Menu #2 – Installer Only	
	Passive Arming On/Off		
	Timer Start On/Off (*4)		
	Turbo Mode On/Off (*5)	Query to activate Secure Aux (*1)	

Some of the button functions above require additional programming by the installer. Here is a list of options that you may want to review before installation. These are features that may not be normally set up at the time of installation. Therefore, there may be an extra charge for these features and installation. Please consult your installer if you would like any of these features. Some of these features require extra installation. You can match the function from the above menu with the option of the below menu by finding the corresponding starred numbers. Example: Valet Mode Function (*2) matches Option 3-10 (*2).

Option Number	Feature	Setting				Applicable To		
		Default(*)	Optional(*)	Optional(*)	Optional(*)	Alarm / Starter	Starter	Alarm
1-3	Driver's priority switch	Off	On			V	V	V
1-6	Reservation Lock (Manual transmission)	Locks When Reservation Mode is Set	Does Not Lock When Reservation is Set	Reservation Set 10 Seconds After the Last Door is Closed		V	V	V

1

If your vehicle is locked, tap **IMPORTANT** If the alarm has been triggered Siren is going off, you must wait up to 5 seconds before disarming the alarm the. The remote start run time can be programmed for 3, 15, 25, or 45 minutes ask your local Firstech dealer to adjust Option 27 if you **IMPORTANT** Your vehicle's key must be inserted into the ignition and turned to the "on" position prior to driving your vehicle. If the foot brake By Firstech, LLC. By Firstech, LLC In order to remote start a manual transmission vehicle, the system must first be set in Reservation Mode. Reservation Mode must be set each and The purpose of Reservation Mode is to leave the transmission in neutral before The vehicles windows must be rolled up. The vehicles door pins must be in working order. Do not set reservation mode or remote start with people in the vehicle. Do not install this remote start on a manual transmission vehicle that has a convertible or removable top. Activating Reservation Mode. **STEP 2** Remove the key from the vehicle's ignition. The vehicle's engine should remain running even after the key has been removed. If the vehicle **STEP 3** Exit the vehicle and close the door. The vehicle's engine should shut off within 10 seconds upon closing the last door. Most motors will shut If the vehicle's engine does not shut off, your door trigger may be functioning improperly. Do not use the Take care to not lock your keys inside the vehicle. Cancelling Reservation Mode. Reservation mode will be cancelled for the following reasons. You did not activate the parking brake prior to turning off the ignition. You pressed the foot brake after the key was removed from the ignition. You released the parking brake after the key was removed from the ignition. You entered valet mode, opened the vehicles door, hood, trunk or set off the alarm. Hold button **IMPORTANT** Trunk release is an optional vehicle feature that may require additional parts and labor. Normally, the siren will.

To mute the siren tap **IMPORTANT** Even when the siren is muted, it will still go off in the event the alarm is triggered. Hold buttons The vehicle's parking lights will flash **IMPORTANT** Turning off the shock sensor also turns off the optional sensors. The shock sensor does not recognize impact for 30 seconds after the system has been armed. By Firstech, LLC There are lots of advanced features available for your system. Please go to www.compustar.com for more details. **IMPORTANT** Every Firstech remote must be coded to the system prior to performing any operations. All remotes must be coded at the same time. **STEP 2** Within 2 seconds after cycling the ignition for the 5th time, press

button I on 2 way remotes or the lock button on 1 way remotes for 0.5Remote Start Error Diagnostic. If the remote start fails to start the vehicle, the parking lights will flash three times immediately. Following those three flashes the parking lights will flash three times immediately. Number of Parking Light Flashes. Remote Start Error. Motor running. Key in ignition on position. Door open manual transmission only. Trunk open. Foot brake on. Hood open. Reservation off manual transmission only. Tach or voltage sensing failure. We recommend that you do not attempt any repairs on your remote starter. Contact your dealer or call us directly. Exiting Programming Programming is a timed sequence. The parking lights will flash twice signaling theProgramming Multiple Remotes After the confirmation flash given in step 2, code additional remotes byThe parking lights will flash onceAll systems except the P2WSSR, can recognize up to three remotes. By Firstech, LLCLimited Lifetime Warranty. While the alarm is armed, the LED will blink slowly. While the siren is going off, the LED will indicate the specific zone that was triggered. UponPriority. Situation. LED On Duty.



<https://www.thebiketube.com/acros-boss-br-800-digital-recorder-manual>

Number of Siren Chirps If InstalledOptional Sensor TriggeredFirstech, LLC Warrants to the original purchaser that this product shall be free of defects in material and workmanship under normal use and circumstances for theWhen the original purchaser returns the product to the retail store where it was purchased or prepaidThis warranty gives you specific legal rights, and you may also have other rights, which vary State to State. Firstech, LLC. is not RESPONSIBLE OR LIABLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, ANY CONSEQUENTIALBy Firstech, LLCThis warranty will not be valid unless you havePDF Version 1.3. Linearized No. XMP Toolkit 3.1701. Producer Acrobat Distiller 5.00 for Macintosh. Creator Tool QuarkXPress3.3K LaserWriter 8 KH8.7.1. Creator So Lim. Document ID uuid0bab06a9fcc45379edf6c03620d17ea. Instance ID uuideec21f1971624d4a8cefc95fa8e04a89. Has XFA No. Page Count 7. Author So Lim. Files are available in PDF format. CompuSTAR 2W8000FMR User Manual 34 pages. Upload manual. Full Manual; FTCHR1DC FTCHR2DC FTCHR Quick Start Card Our Links. Replacment Remotes; Warranty; User Manuals; FAQs; Support; Dealer Locator; Help Center. Text mode;. Here is a list of options that you may want to review before installation. Compustar Installation Manual FREE

COMPUSTAR INSTALLATION MANUAL DOWNLOAD. Download and Read Compustar 2w900fmr Manual Compustar 2w900fmr Manual Now welcome,.Reload to refresh your session. Reload to refresh your session. XQPRreuscPPQTPPRwYPPfmrMRMUp. RwshlcdMUpKent, WA 98032Introduction. Warranty Coverage. Thank you for purchasing a CompuStar system for your vehicle. In order to truly enjoy the benefits of this system, we recommend that you thoroughly reviewPlease note that this manual applies to the 2W900FMR2nd5P and 2WSHLCDR system, regardless of whether you purchased the. There are certain features listed in this manual that may not be available for your system.

<http://instalaciones-martinez.com/images/carter-carburetor-manual-choke.pdf>



There mayIf you have any questions, please contact theFor further information you may also contact our customer support center by calling 8888203690. Kits Contents. CMController. RemoteFor completeCompuStar remotes carry a 1 year warranty from original date of purchase. We no longer include a mail in warranty registration card with each unit registration must be done online. To verify that an authorized dealerComponents. P1W ANT ANT ANT ANT ANT Harness Siren Shock RPS Temp Secure Hood. SH R 2WSS 2W900 1W900 2WSH 1WSH Assembly. SensorRemote. Antenna. Components. Alarm Starter Alarm 2W900F 2WSH 2WSH 1W900 1W SH R ANT ANT ANT ANT ANT Harness Siren Shock RPS Temp Secure Hood. Starter. MR2nd5P LCDR LEDR. MR Fiance 2WSS 2W900 1W900 2WSH 1WSH Assembly. SensorRemote Reference. Remote ReferenceFront. By Firstech, LLCRearApplicable to the following models. Applicable to the following modelsFront. Side. RearQuick Reference. When servicing or loaning your vehicle to others, the CompuStar system should be placed in Valet Mode. Valet Mode prevents the system fromIMPORTANT While in Valet mode the CompuStar will still lock and unlock power lock systems. The system can be put into valet one of two ways;Repeat this process to take the systemShortly after the first flash, the parking lights will flash twice. AQuick Reference. No programming is required when replacingTwoWay Remote Models 2W900FMR2nd5P and 2WSHLCDR. First, release the battery cover lock located on the back of the remote. Once the lock is released, gently slide the battery cover off to expose theIMPORTANT Be sure to observe correct polarity when installing the battery. OneWay Remotes 1W900FMR and

1WSHR Fiance. First, remove the small Phillips screw located on the back of the remote. Once the screw has been removed, gently pull the remote apart taking careThe 1W900FMR and 1WSHR requires two 2025 batteries.

<http://www.dimalcco.com/images/cart-o-de-ponto-manual-download.pdf>



These specialty batteries can be purchased from yourIf your system is set up for a secure valet option optional, you will not be able to put the system into valet until the proper code has been entered toThe secure valet switch is the small button with bright blue LED on the front and if installed is the only way to override the. Until programmed, the default code is 3, 3. By Firstech, LLCQuick ReferenceSTEP 2 After entering programming mode. Adjust the time settings by tapping button I to change the hour and tapping buttonQuick Reference. ButtonAdditionalProgramming. RequiredRun time extender. Resets remote start and turbo run time while vehicle is remote started. Aux 1. Triggers the auxiliary 1 output most commonly used for rear defrost or window rolldown. Activates the remote start. Repeat and remote start will shut off. Aux 2. Triggers the auxiliary 2 output most commonly used for rear defrost or window rolldown. Trunk pop. Triggers the trunk release output and opens the vehicle's trunk.Option programming menu 1. For use during installation.Valet mode see page 5 for detailsOption 19Option 211Drive lock. Activates ignition controlled door locks. Option programming menu 2. For use during installation.Quick Reference. Quick Reference. Button Duration. By Firstech, LLCRequiredAccesses remote option programmingAux 1. Triggers the auxiliary 1 output most commonly used for rear defrost or window rolldownTrunk pop. Triggers the trunk release output and opens the vehicle's trunk.Aux 2. Triggers the auxiliary 2 output most commonly used for rear defrost or window rolldownOption 26. Activates timer start mode. Timer start mode has multiple programmable settingsOption 22. Activates the built in 2nd Car function. RequiredActivates the remote start. Repeat and remote start will shut offOption programming menu 1 Installers OnlyValet mode see Valet Mode section for detailsQuick Reference. Remote LCDliquid crystal display Diagram and Icons.

Your remote pager will indicate the status of your vehicle while in range. RequiredOption 19. Drive lock. Activates ignition controlled door locks.Option programming menu 2 Installers OnlyActivates 2nd Car Mode on the P1WSHR US StyleOption 26. Activates the builtin Turbo timer function.

Additional installation is required when using this By Firstech, LLC Remote LCD liquid crystal display Diagram and Icons. While armed, the system will monitor the doors, If any of these inputs are triggered while the system is armed, the alarm will be triggered. Trunk Release. This icon will be displayed when the trunk release function has been activated. By default, the system will be disarmed and the Remote LCD liquid crystal display Diagram and Icons. Engine Running. This icon will be displayed while the vehicle is running after it has been remote started. Timer Mode. This icon will be displayed when Timer mode is active. Timer mode can be set up to start the vehicle every 1.5, 3, or once every 24 Signal Strength. This icon is displayed if the last communication to the vehicle was successful. Valet Mode. This icon will be displayed while you are in Valet mode. While in valet mode, the system will not perform any functions other than If any other function is attempted, Sleep will be Battery Indicator. This icon displays the remaining battery life left in 25% increments. Clock. Displays current time, remote start runtime, turbo mode time remaining, inside temperature of the vehicle, battery voltage of the By Firstech, LLC Remote LCD liquid crystal display Diagram and Icons. Siren. This icon will be displayed if the siren is turned on. Turning the siren off only applies to the chirps when arming, disarming, or Hood. This icon will be displayed if the hood is opened while the system is armed. The remote will beep rapidly while displaying this icon. This means that the alarm was triggered. If this icon appears while trying to remotestart the vehicle, it means that the vehicle will Impact.

<https://www.energetisch-therapeut-estie.nl/wp-content/plugins/formcraft/file-upload/server/content/files/162842f608332d--Buick-roadmaster-repair-manual.pdf>

This icon will be displayed if an impact to the vehicle is detected while the system is armed. The remote will beep rapidly while If it beeps slowly while displaying this icon, that Door. This icon will be displayed if the door is opened while the system is armed. If this icon appears while trying to remotestart the vehicle, it means that the vehicle will Trunk. This icon will be displayed if the trunk is opened while the system is armed. If this icon appears while trying to remotestart the vehicle, it means that the vehicle will Car Call. This icon will be displayed while someone is attempting to contact you using the RPS sensor. To trigger the RPS sensor, you must Something that creates a higher pitch, like a key, is better suited to trigger the RPS. By Firstech, LLC Passive Mode. This icon will be displayed if Passive mode is currently active. Passive mode will automatically arm the system 30 seconds after the This mode is ignored while the ignition is on Not. Available. Drive Lock. This icon will be displayed if Drive Lock mode is currently active. Drive Lock mode will lock the doors automatically if the ignition is The doors will be unlocked when the ignition is turned off. In a manual transmission vehicle the doors will Turbo Mode. This icon will be displayed if Turbo mode is currently active. While Turbo mode is active, the vehicle will remain running for a This will be displayed while you are in 2nd Car mode. 2nd Car mode allows you to control another vehicle with the same system Vibration. This icon will be displayed if the remote is set to vibrate only. While the remote is set to vibrate only the remote will not beep, even The remote will still vibrate in this mode. Remote LCD liquid crystal display Diagram and Icons. Not. Shock Sensor Bypassed This icon is always displayed on starter only systems because there is no shock sensor. Voltage. This icon will be displayed while the remote is reporting the voltage of the vehicle or remote battery. Temperature.

<AVANDCIE-ENERGY.COM/ckfinder/userfiles/files/boss-532-manual.pdf>

This icon will be displayed while the remote is reporting the temperature of the vehicle. General System Functions. The four button configuration allows for many functions. Although CompuStar remotes have numerous button functions Sending Commands. When in range, and a command has been sent, the remote pager backlight will illuminate, the remote will beep and the appropriate icon will be Once the vehicle has successfully remote started, the Receiving Commands. The remote pager will receive commands indicating the status of the vehicle, confirmation of sending commands and alarm notifications. For example. To see if your By Firstech, LLC General System Functions. If your

vehicle is locked, tap button I to unlock; if your vehicle is equipped this will also activate your starter kill and anti grind feature. You will not be able to start. **IMPORTANT** If the alarm has been triggered Siren is going off, you must wait until the remote pager has been paged before disarming the alarm. The system can be configured to passively lock and arm the vehicle. While in passive mode, the system will lock and arm the alarm 30 seconds after the last door is closed. As an indicator that the vehicle is going to General System Functions. Press button II for 2.5 seconds to remote start an automatic transmission vehicle. If you are in range and if the vehicle is ready to remote start, the If you are in range and the remote beeps three times, there is a remote start error. Refer to the remote start error diagnostic on the last page of this Upon receiving confirmation that your vehicle is running, the LCD will flash the exhaust icon and the clock icon will begin to show the The remote start runtime can be programmed for 3, 15, 25 or 45 minutes ask your local CompuStar **IMPORTANT** Your vehicle's key must be inserted into the ignition and turned to the on position prior to driving your vehicle.

If the foot brake In order to remote start a manual transmission vehicle, the system must first be set in Reservation Mode. By Firstech, LLC General System Functions. **STEP2** Remove the key from the vehicle's ignition. The vehicle's engine should remain running even after the key has been removed. If the vehicle **STEP3** Exit the vehicle and close the door. The vehicle's engine should shut off within 10 seconds upon closing the last door. If the vehicle's engine Do not use the remote start feature and take your vehicle to a local General System Functions. Hold button III for 2.5 seconds to release the trunk or hatch. If you are in range, the remote will beep once and the trunk icon will **IMPORTANT** Trunk release is an optional vehicle feature that may require additional parts and labor. Take care to not lock your keys inside the vehicle. Your system is equipped with two additional outputs that can be configured to control windows, open power sliding doors, open a power sliding These outputs can be configured for pulsed, timed or latched settings. Your authorized CompuStar Using auxiliary outputs to control additional vehicle functions will require additional parts and can be Reservation Mode Settings. Reservation mode settings can be programmed with Option 16. It is recommended that reservation mode settings are programmed by your local **Default1** Locks doors when reservation mode is set. **Option2** Does not lock doors when reservation mode is set. **Option3** Reservation mode sets 10 seconds after the last door is closed, as opposed to immediately. By Firstech, LLC By default, the system is in secure auxiliary mode, which requires you to tap button IV for 0.5 seconds prior to triggering auxiliary 1 or 2. To turn General System Functions. When in range of your vehicle, the remote will display the vehicle's temperature and vehicle battery voltage upon tapping button IV. The temperature will be displayed after tapping button IV for 0.5 seconds.

Tap button IV a second time within four seconds to Tap button IV a third time within four seconds to display the remote's battery voltage. If you tap button IV and you do not get any response from the remote, the remote pager is most likely out of range to receive commands. If you tap Normally, the siren will. To mute the siren tap. **IMPORTANT** Even when the siren is muted, it will still go off in the event the alarm is triggered. All CompuStar 2 Way LCD remotes have the option to be muted. To make the remote silent you must turn on vibration mode; **STEP2** To set vibration mode simply tap button IV one time for 0.5 seconds after entering remote programming mode. The vibration icon will remain illuminated on the LCD indicating the remote is in remote. The remote will beep twice and the shock The remote will beep once and the shock sensor icon will disappear to **IMPORTANT** Turning off the shock sensor also turns off the optional sensor. Adjusting the shock sensor sensitivity is done at the actual sensor, which is generally mounted somewhere under the vehicle's dashboard. The higher By Firstech, LLC Advanced System Functions. The following section reviews advanced system functions. Many of these functions require multiple steps or additional programming by your local The remote will beep twice Advanced System Functions. This feature can not be turned on with the 2 Way remote. The built in turbo timer keeps the vehicle's engine running for either 1, 2, or 4 minutes This feature will keep oil running through the Tap the Trunk and Key buttons simultaneously

for 0.5 seconds to turn on or off turbo mode. "on 1 Consult your local. IMPORTANT Drive lock mode requires that the dealer turn on Option 19. Drive lock has two settings; Default 1 Off. Option 2 Locks the doors when the ignition is on and after the brake is depressed. Option 3 locks the doors when the RPM s have reached two times that of idle speed this setting requires that a tachometer wire is connected.

With both settings, the doors will unlock when the ignition is turned off. If using this feature on a manual transmission vehicle, the doors will unlock. The 2W900FMR2nd5P remotes have the ability to operate a 2nd vehicle. The remote will beep once and the 2nd car icon will illuminate to confirm that 2nd car mode is activated. The IMPORTANT 2nd car mode requires the remote to be programmed to a 2nd vehicle that is equipped with either a 2W900FMASDT, By Firstech, LLC Advanced System Functions. Advanced System Functions. The RPS is an optional feature. After the RPS has been triggered, the car call icon will illuminate and the remote will ring several times if the remote is in range to receive commands. To trigger the car call or RPS sensor, you must knock on the windshield in front of the RPS at least two times. The switch on the RPS will adjust paging Use a key or pen for best results. If you do not want the remote to receive pages The RPS is an optional feature. STEP 2 Once in programming mode, you can turn the feature off by tapping button III for 0.5 seconds. The RPS icon will The car call icon will no longer be illuminated on the LCD indicating that the remote is not in car call By Firstech, LLC STEP 3 Knock on the windshield in front of the RPS a total of 10 times each time you knock the LED on the RPS will flash RED. The LED will begin STEP 4 Enter the first digit of the desired four digit pass code by knocking on the windshield in front of the RPS the desired number of times. For STEP 5 The LED on the RPS will confirm your first number by flashing BLUE slowly. Once the LED begins to flash rapidly in BLUE, enter your Advanced System Functions. The Secure Valet. IMPORTANT The first two digits of the RPS. If you are not using the. RPS unlock, following the below procedures to program your secure valet pass code. Timer start mode is used to cool or warm the vehicle without manually starting with the key or from the CompuStar remote.

While Repeat the same step to Timer start mode will be cancelled any time the vehicle is started manually or remotely. To change from the STEP 1 Turn on Option 310 III. Dealer programmed option. STEP 2 Turn ignition key to the on position. STEP 3 Hold down the valet switch for 1.5 seconds. The LED on the valet switch will begin to flash rapidly with successful completion of this step. STEP 4 Enter the first digit of the desired two digit pass code by depressing the switch the number of times that coordinates with the desired first STEP 5 The LED will confirm the first number by flashing BLUE slowly. Once the LED begins to flash rapidly, enter your second number by Default 1 Will start every 3 hours for a 24 hour cycle, or until the vehicle is remote started or started by key, and run for 4 minutes 8 minutes for diesel. Option 2 Will start every 1.5 hours for a 24 hour cycle, or until the vehicle is remote started or started by key, and run for 4 minutes 8 minutes for diesel. Option 3 Will start at the time specified on the 2 way remote once within 24 hours and run for either 15, 25, 45 or 3 minutes see your local dealer to This option requires a cold or The system will only start if it is below the cold temperature settings or above the hot temperature settings. STEP 6 Turn the ignition off the Secure Valet Switch is now programmed. Follow steps 3 5 to enter your Secure Valet code. By Firstech, LLC Advanced System Functions. To program a specified start time, used for Option 3, perform the following steps. Auto Mode is only available in certain markets and is not available in the U.S. When the system is in Auto Mode, the system will detect the remote. The system will also detect the remote as you walk away from your vehicle and. Hold down button I for 2.5 seconds to activate Auto Mode. The remote will beep once and the auto icon will illuminate. STEP 2 Tap button II for 0.5 seconds. The Timer icon and clock will flash.

STEP 3 Once the timer and clock icons are flashing, set the desired start time by tapping button I for 0.5 seconds to adjust the hour Remember, after you set the time, you must be in timer mode before the vehicle will start. The remote will beep once and the timer icon will illuminate just above the

clock icon. It allows you to configure your timer start. All of these options require programming from your local CompuStar dealer. The following are by Firstech, LLC. IMPORTANT: If you find that you are remaining on the border of range between your remote and vehicle, and your CompuStar is continually beeping, while in the third setting, the. Hold down button I a third time for 2.5 seconds to turn on the third setting. Turn Auto Mode off by holding down button I a fourth time for 2.5 seconds. The remote will beep twice and the Auto Mode icon will disappear. The CompuStar systems have a built-in mode that would require you to keep your remote separate from your key chain.

<http://schlammatlas.de/en/node/21543>